

Nogging Schedule 2425 - 2750 High

Suitable for
Precision GTS-2 ,
Genius GTS - 3 or
Smart Pro GTS-4

Please contact us for alternative
motor requirements

**Refer to Quote for
Weight Estimate
or get in touch**

Please consult your Rep for
doors over 6000w or 180kg

Note for ceiling higher than
3000mm, Mobile Scaff will
need to be provided

**ALL DOORS OVER
200KG SHOULD BE
CHECKED WITH YOUR
STRUCTURAL
ENGINEER TO ENSURE
ADEQUATE STRENGTH**

**BOOK INSTALL -
09 638 9474**

Call us at least 2 weeks before
the requested installation date
to book install.

**To avoid a non-install charge
(\$175+GST+Travel*) please ensure;**

- 1) Lining on ceiling walls are complete
- 2) Garage is clear 4m back from the door
- 3) Clear access on garage driveway
- 4) Access to powder supply in garage
- 5) All nogs ready per this sheet
- 6) We need minimum 48 hours to change the
install date once booked


Measurements after Gib is installed

	Standard	Low
Headroom	350mm	200mm
Sideroom	155mm	110mm+
Backspace to Motor	Door Height + 900mm	Door Height + 1100mm

**If Coving is being used, the headroom
is taken from the bottom of the coving**

Any questions call your Sales Representative
or Prestige Office on 09 638 9474

***\$3 per km over 20km from Prestige Factory (Penrose)
POA for Waiheke or outside of Auckland**

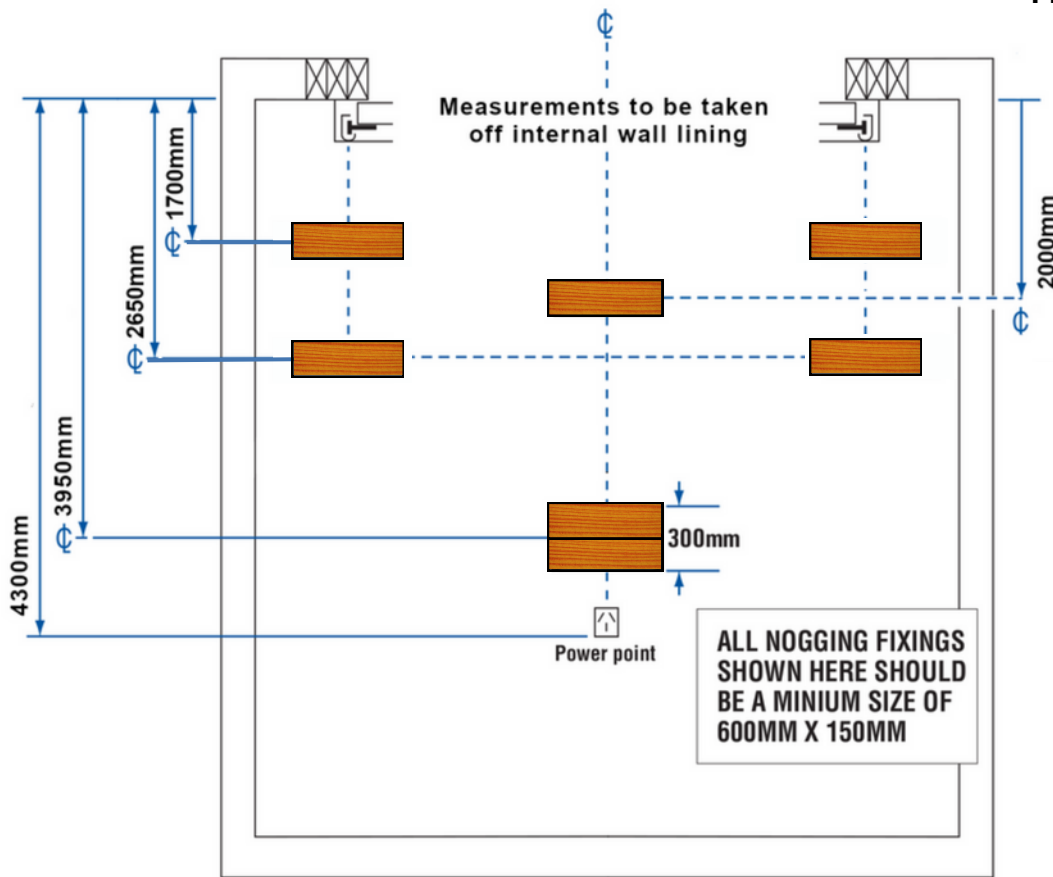

¢ All Nogs must be centred

