



# Nogging Schedule 2751 - 3200 High

Suitable for  
Precision GTS-2 ,  
Genius GTS - 3 or  
Smart Pro GTS-4

Please contact us for alternative  
motor requirements

**Refer to Quote for  
Weight Estimate  
or get in touch**

Please consult your Rep for  
doors over 3200h, 6000w or  
180kg

Note for ceiling higher than  
3000mm, Mobile Scaff will  
need to be provided

**ALL DOORS OVER  
200KG SHOULD BE  
CHECKED WITH YOUR  
STRUCTURAL  
ENGINEER TO ENSURE  
ADEQUATE STRENGTH**

**BOOK INSTALL -  
09 638 9474**

Call us at least 2 weeks before  
the requested installation date  
to book install.

**To avoid a non-install charge  
(\$175+GST+Travel\*) please ensure;**

- 1) Lining on ceiling walls are complete
- 2) Garage is clear 4m back from the door
- 3) Clear access on garage driveway
- 4) Access to powder supply in garage
- 5) All nogs ready per this sheet

**6) We need minimum 48 hours to change the  
install date once booked**


## Measurements after Gib is installed

	Standard	Low
Headroom	350mm	200mm
Sideroom	155mm	110mm+
Backspace to Motor	Door Height + 900mm	Door Height + 1100mm


**If Coving is being used, the headroom  
is taken from the bottom of the coving**

Any questions call your Sales Representative  
or Prestige Office on 09 638 9474

**\*\$3 per km over 20km from Prestige Factory (Penrose)  
POA for Waiheke or outside of Auckland**

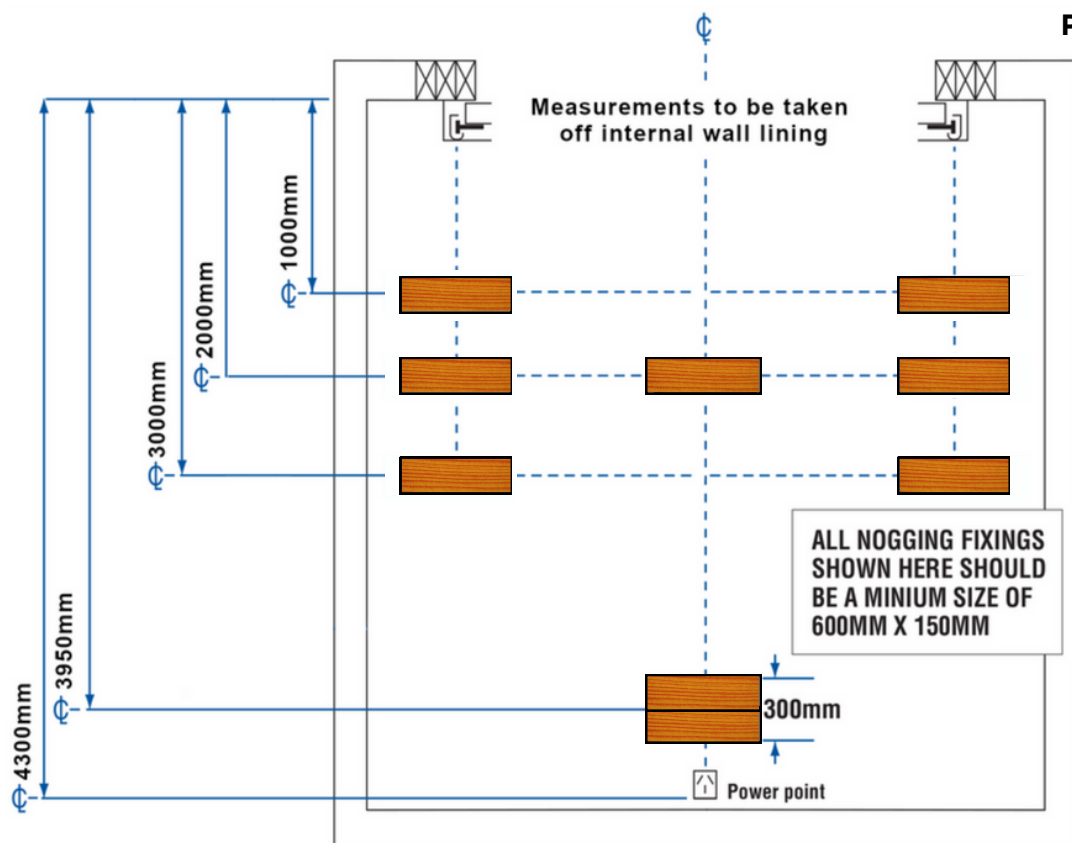

⌀ All Nogs must be centred

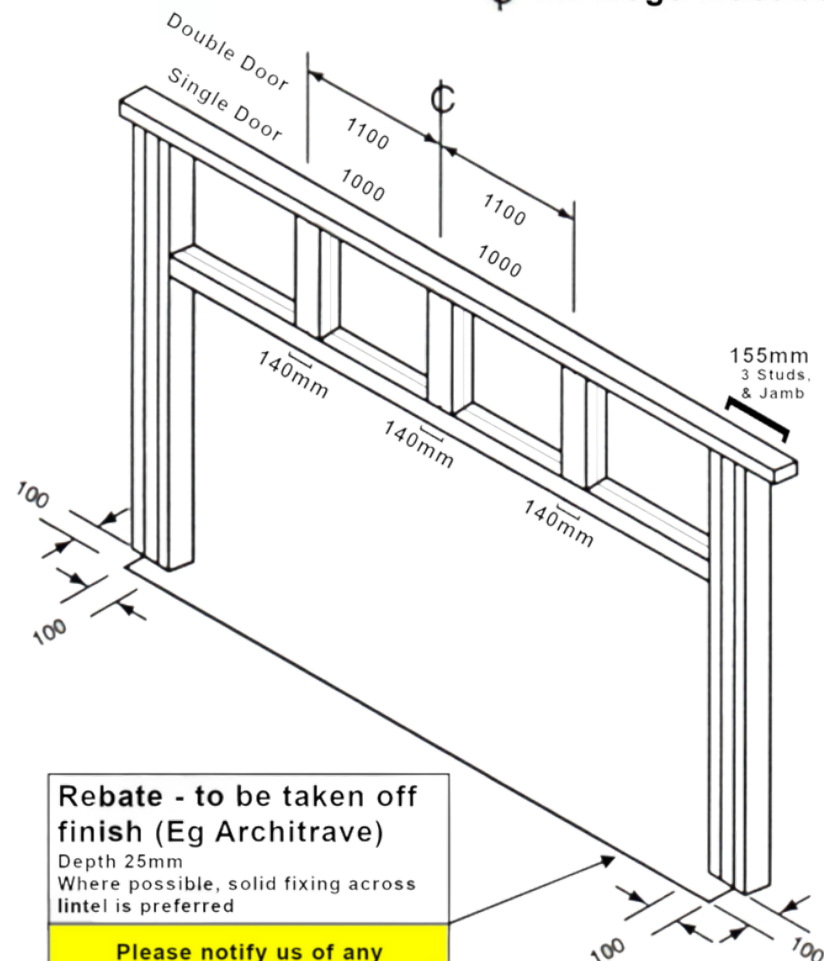

**Rebate - to be taken off  
finish (Eg Architrave)**

Depth 25mm  
Where possible, solid fixing across  
lintel is preferred

**Please notify us of any  
Architrave additions / Alterations**

**NOTE: In order to ensure maximum weathertightness, do not use Bevelled Architraves**

[www.prestigedoors.co.nz](http://www.prestigedoors.co.nz)