


Genius HD, Genius & Precision

Sectional Door Openers Quick Operation Guide

1.0 USER OPERATING CONTROLS

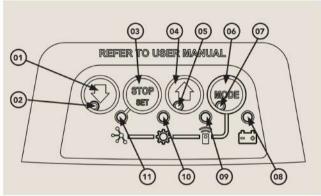


Button	Function	
01	Close	
02	Close indicator	
03	Stop	
04	Open	
05	Open indicator	
06	Mode	
07	Status indicator	
08	Battery status indicator	
09	Remote status indicator	
10	Adjustment indicator	
11	Network indicator	

2.0 MANUAL DOOR OPERATION

TO DISENGAGE THE OPENER



It is recommended to disengage the door with the door in the closed position.

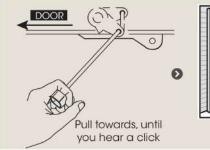




Manually operate door

CAUTION: When the opener is manually disengaged, the door is no longer locked. To lock the door manually, re-engage the opener after the door is closed.

TO ENGAGE THE OPENER

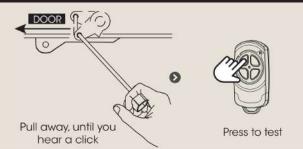



3.0 CODING A REMOTE CONTROL

CODING REMOTE FROM THE OPENER



The opener can only be operated from remote controllers that have been programmed into its memory. Up to 64 remotes can be programmed.

STEP ONE



Switch power on and remove controls cover

STEP THREE





Opener flashes & beeps



HOLD for 3 sec RELEASE HOLD for 3 sec

Release both buttons

STEP TWO 0







till remote LED lit

STEP FOUR



Then refit controls cover

STEP FIVE



Press to test

REMOTELY CODING A REMOTE CONTROL



Remotely coding works when you have pre-coded remote control and are in range of the opener.

STEP ONE



Take a pre-coded remote and press the button to duplicate

STEP TWO



the middle button through the coding hole

STEP THREE

Opener flashes & beeps



Take new remote

HOLD for 3 sec RELEASE HOLD for 3 sec

RELEASE

STEP FOUR

Opener stops flashing & beeping



Press to test

OK

Replace

Replace

CHANGING A BATTERY



Battery Type: 1 x CR2032.

STEP ONE



Status Table

Check Light 0

Light Status Battery Solid

Flashina

No light

STEP TWO



Use screwdriver to remove screws and open

STEP THREE



Use non-metallic object to push out.



WARNING!: The battery is hazardous and must be kept out of reach of children. The battery can cause severe or fatal injuries within 2 hours or less if swallowed or placed inside any part of the body. If you suspect the battery has been swallowed or placed inside any part of the body, SEEK IMMEDIATE medical attention.

5.0 SMART PHONE CONTROL

(Optional for Precision)

The Smart Phone Control works via your home's WiFi network. Initial set up involves linking your phone app and smart opener to your home network.



WARNING!: This device allows for operation of the door when not in line-of-sight of the door and opener. The door may operate unexpectedly, therefore do not allow anything to stay in or near the path of the door.

BEFORE YOU START







0



Download the Garador App to your smartphone

Ensure limits are set prior to connecting to wifi

The home WiFi router is within range of opener

STEP ONE







Remove controls cover till network & Press repeatedly LED is lit

STEP TWO



OLD for 5 sec LED will turn PURPLE (HOTSPOT ON)

STEP THREE







Go to phone settings, then WiFi and select (GAR000000)

Open APP and click START

STEP FOUR



Set up new Smart Hub in app

Smart Hub connect appears, ensure WiFi network = (GAR000000)

STEP FIVE











Network LED and light will flash.

Press

Follow instructions in the app Network LED will turn Blue then return controls cover

6.0 TROUBLESHOOTING

Main Light = Service / Warning Indicator:

Requirements for a service and user warnings are indicated after operation by the main light repeatable flashing OFF a number of times followed by a pause. The below table identifies the issues and remedies

0	• ///	A CONTRACTOR NO.	
4	Issue	Remedy	
1	Normal operation (door is fully open)		
2	PE is precenting door from moving	Clear away any obstructions. Test Door. If unable to move the door and suspect beam is faulty, enter Safety Beam Emergency Close by pressing and holding a pre-coded transmitter button until the door closes.	
3	Wireless Auto-Lock battery is low	Change Auto-lock battery	
4	Wireless PE battery is low	Change PE Battery	
5	Wireless Auto-Lock is not unlocked and preventing door moving	Check Auto-Lock, test by pressing emergency release button on the lock and the test door operation.	
6	Maintenance is due after pre-set number of cycles.	Contact dealer to arrange service.	
7	Standby battery is faulty	Contact 0800 427 236 within New Zealand for assistance.	
8	Door was obstructed	Clear away any obstructions and test door opens/closes correctly. (if the door is damaged, contact a door professional)	
9	Motor overloaded or stalled	Contact dealer to arrange a door service.	
10	Unit running on battery power (Optional)	Main light will flash (3) three times at the start of the cycle to indicate the opener is running from battery backup and 10 flashes at the end of cycle. Check power supply.	

7.0 CARING FOR YOUR OPENER

Preventative servicing of your garage door and opener, is important. Your garage door is made up of numerous moving parts designed to lift and lower your door safely and efficiently.

Ongoing preventative servicing ensures that your door continues to function within factory specifications, greatly reduces the risk of failure and repair bills down the track and ensure you maintain your Warranty.

Refer to your Owners Opener Handbook for your service schedule available <u>HERE</u>.



Refer to the installation manual for monthly testing procedures in Section 13 to ensure garage door is fit for use available <u>HERE</u>.

Online warranty details are available HERE.

8.0 NEED A SERVICE CALL?

If the opener needs a service please call the dealer who installed the garage door opener (their contact details are usually on a sticker on the back of your garage door).

For product assistance, general enquiry or more information, please visit:

www.prestigedoors.co.nz

09 638 9474